

A

ACID BRUSHES K-3
ACORN
 Repair Parts G-1 to G-3, H-7 to H-9
ADAPTERS
 Aerator E-21
 Dishwasher Aerator E-21
 Hose D-10, E-21
ADD-A-SHOWER H-3
AERATORS E-21
AIR GAP E-10
ALSONS H-1, H-2
AMERICAN STANDARD
 Ballcock Repair I-10 to I-14
 Bedpan Washer Repair J-1
 Drinking Fountain Repair E-1, E-2
 Faucets A-1
 Flush Valves I-6
 Kitchen Faucet Repair G-4 to G-16
 Lavatory Faucet Repair G-4 to G-16
 Sinks B-1
 Toilets B-2
 Tub/Shower Repair H-10 to H-15
 Urinals B-4
 Utility Faucet Repair G-14, G-15
ANTI-SYPHON
VACUUM BREAKERS C-1, D-4
AQUA PURE (Sec Cuno) L-1 to L-8
ARRESTORS
 Water Hammer E-25
ARMS
 Continuous Waste E-11, E-14
 Guide I-6
 Wall E-11
ASSORTMENTS
 Repair F-8 to F-10, F-14
AUGER
 Closet K-11, K-13
AUTO-VENT E-10

B

BACKFLOW PREVENTERS D-4, D-5
BACKWATER VALVES E-32
BALLCOCK
 Complete I-6
 Refill Tubes I-4
 Shank Washers I-2
 Washers I-2
BALLCOCK OEM REPAIRS
 American Standard I-10 to I-14
 Briggs/Case I-15 to I-18
 Eljer I-5, I-6
 Fluidmaster I-1
 Kohler I-19, I-20

BALL VALVES C-2, C-3
BALLS
 Flapper I-7
 Tank I-7
BAP ADAPTERS E-26
BARRELS
 Re-nu F-1
BAR SINK STRAINER E-30
BASIN COCK
 Complete A-2, A-6, E-10
 Repairs
BASIN GASKETS
 Lavatory E-29
BASIN WRENCHES K-2, K-5, K-6
BASKET STRAINER
 Complete E-30
 Gaskets E-29
 Wrench K-2, K-3
BATH DRAIN
 Repairs H-15, H-43
BATHSHOE E-12
BATTERIES K-11
BEDPAN WASHER REPAIR
 American Standard J-1
 Sloan J-12
BELL & GOSSETT D-7, D-8
BIBB SCREWS F-10
BIBB WASHERS F-8
BITS
 Screwdriver K-3
BLADES
 Cut-Soil (Reciprocating) K-4
BOILER DRAINS C-2, C-3
BOLTS
 Closet I-4
BONNET PACKING F-11
BOWL SETTING GASKETS I-2
BRADLEY
 Repairs G-17 to G-21, H-16 to H-18
BRASSCRAFT
 Brass Fittings E-19, E-27, E-28
 Supply Stops E-16, E-17
 Supply Tubes E-19
BRIGGS
 Sinks B-5
 Toilets B-5
 Tubs B-5
BRIGGS/CASE
 Toilet Repair I-15 to I-18
BUBBLER HEADS
 Central Brass A-6
 Chicago A-3
 Haws E-8
 Generic E-10
BUNGEE CORDS K-11

C

CAMCO
 Water Heater Elements D-9
CAP THREAD GASKETS F-10
CAPS
 Closet Bolt I-4
CASE/BRIGGS
 Toilet Repair I-15 to I-18
CAULK H-5
 Caulking Gun H-5
CENTRAL BRASS
 Bubblers A-6, E-3
 Faucets/Fittings A-5, A-6
 Kitchen Faucet Repair G-23, G-24, G-27
 Lavatory Faucet Repair . G-22, G-25, G-26, G-27
 Tub/Shower Repair H-19
CHANNELLOCK PLIERS K-11
CHATHAM
 Shower Heads H-5
 Caulk H-5
CHEMICALS
 Compounds H-5, K-14, K-15
 Drain Cleaning K-14
CHERNE K-13
CHICAGO FAUCETS
 Complete A-2 to A-4, G-28
 Repairs G-28 to G-39
 Spouts G-29 to G-31
CHISELS K-7
CHURCH TOILET SEATS I-8, I-9
CLEAN-OUT PLUGS I-3, E-32
CLOBOEN K-14
CLOSET
 Augers K-11, K-13
 Bolt Caps I-4
 Bolt Nuts I-4
 Bolt Washers I-4
 Elbows E-11
 Flanges E-31
 Screws I-4
 Seat Nut Wrench K-2
 Seats I-8, I-9
 Spud Washers/Gaskets I-4
 Spud Wrench K-2
 Spuds I-4
COAST
 Ballcocks I-6
COIN AIRVENT I-3
COMPRESSION
 Fittings, Brass E-19, E-27, E-28
 Stops C-2, C-3, E-16, E-17
CONE WASHERS E-20
CONNECTORS
 Waste E-13
 Water Heater D-9

INDEX

CONTINUOUS WASTE

Arms E-11, E-14
Brass E-11
Plastic E-14

COUPLING

Assemblies, Spud (Sloan) J-17
Compression E-27
Washers, Nylon E-20
Washers, Rubber E-20, E-29

COVERS

Faucet Hole E-30

COYNE & DELANEY (See Delaney)

CRANE

Flapper I-7

CUNO

Water Filters L-1 to L-8

CURTIN VALVE I-7

D

DAYTON SINKS B-6, B-7

DELANY

Flushometer Repair J-2 to J-4

DELTA

Faucets A-7, A-8
Kitchen Faucet Repair G-43 to G-47
Lavatory Faucet Repair .. G-47, G-40 to G-43
Tub/Shower Repair H-20, H-21

DIELECTRIC UNIONS E-22

DIP TUBES D-10

DIPPERWELL

FAUCETS & SINKS A-9

DISHWASHER

Aerator Adapter E-21
Branch Tailpieces E-12, E-14
Connector Unit E-18, E-24, E-30
Dishwasher Hose K-11

DISPOSAL

Stopper E-30

DIVERTER

Tub Spouts H-6
Valves, Shower Arm H-1
Valves, Sink Spray E-29

DOUGLAS FLUSH VALVE I-7

DRAIN ASSEMBLIES

PO, CO Plugs E-11
Pop-up E-10

DRAIN SNAKE (Cloroben) K-14

DRESSER COUPLINGS E-22

DRINKING FOUNTAIN REPAIR

American Standard E-1, E-2
Central E-3
Elkay E-6
Haws E-4 to E-7
Kohler E-8, E-9

DRINKING FOUNTAIN VALVES

Central Brass A-6
Chicago A-3
Haws E-8
Generic E-10

E

ELBOWS

Flush E-11
Supply H-4

ELJER

Toilet Parts I-5, I-6

ELKAY

Sinks B-7 to B-9
Drinking Fountain B-10, E-6

END OUTLET TEE E-12, E-14

ESCUTCHEONS/FLANGES E-15

EXPANSION TANK D-4

EXTENSION CORDS K-11

EXTENSION TUBES E-12, E-14

EZ-TEST DRAINS E-32

F

FACE BUSHING, BRASS H-6

FAUCET

Bibb Washers F-8
Complete Section A
Hole Cover E-30
Seat Gauge F-14
Seats F-12 to F-14

FELT GASKETS I-2

FERNCO

Connectors E-24
FERRULES E-27

FIBERGLASS TUB/SHOWERS B-11

FIBER WASHERS F-10

FISHER

Complete Faucets, Valves A-8, A-9
Glass fillers A-8
Repair G-48 to G-53
Rotary Waste Units A-9

FITTINGS

Brass E-27, E-28
Chrome Plated Brass E-19
Compression E-27, E-28
Flare E-27

FLANGED TAILPIECES E-12, E-14

FLANGES/ESCUTCHEONS E-15

FLAPPER BALLS I-7

FLARE FITTINGS, BRASS E-27

FLARING TOOL K-2

FLASHLIGHTS K-11

FLEXIBLE SUPPLIES E-18

FLOAT

Tank Balls I-3
Rods I-4

FLOODGUARDS K-11

FLUIDMASTER

SS Supply Connectors E-18
Ballcocks I-1, I-6
Ballcock Repair I-1, I-2
Flush Valves I-1, I-6, I-7

FLUSH ELBOWS E-11

FLUSH VALVES

American Standard I-6
Case I-16
Curtin I-7
Douglas Style I-7
Fluidmaster I-1
Kohler I-19, I-20
Plastic I-7

FLUSHOMETER REPAIR

Delaney J-2 to J-4
Sloan J-6 to J-11, J-13 to J-15
Zum J-19

FLUX K-15

FOOT VALVE, WASH FOUNTAIN G-17

FORCE CUPS I-7

FOUR-IN-ONE SCREWDRIVER K-3

FOUR WAY SILLCOCK KEY K-3

FREEZELESS

WALL HYDRANTS C-1, C-5, C-6

FRICITION RINGS

Brass E-19
Slipjoint E-19
Spud I-4
FUNNEL, SINK E-12

G

GARBAGE DISPOSERS A-15

GAS COCKS C-1

GAS CONNECTORS D-9

GAS LOG LIGHTER VALVE C-1

GASKETS
 Ballcock Shank I-2
 Basket Strainer E-29
 Cap Thread F-10
 Felt I-2
 Flush Valve Shank I-2
 Sink Waste E-29
 Spud I-4
 Urinal I-2, J-21, J-22
 Wax I-2
GATE VALVES C-2, C-3
GAUGE
 Faucet Seat F-14
 Pressure K-1
GLASS FILLERS
 Fisher A-8
 T&S A-13
GLOVES K-11
GOVERNOR 80 BALLCOCK D-4
GREASE (See Stem Lube) K-15
GRID STRAINER E-10
GROHE
 Repairs G-54 to G-59, H-22, H-23
GUIDE ARMS, FLUSH VALVE I-6

H

HACK SAWS & BLADES K-4
HAMMER ARRESTOR, WATER E-25
HAND CLEANER, WATERLESS K-15
HAND HELD SHOWER HEADS H-1
HANDLE SCREWS F-10
HANGERS E-22, E-23
HAWS
 Bubbler E-8
 Valve Repair E-4 to E-7
HEADS
 Hand Held Shower H-1
 Shower H-1, H-5
 Snake K-11 to K-13
HEAT SHIELD K-5
HOLESAWS (Lenox) K-4
HOSE ADAPTERS D-10, E-21
HOSE BIBB
 Vacuum Breaker D-4, E-10
 Valves A-2, A-4, C-1 to C-6
HOSE CLAMPS K-1
HOSE SPRAY, SINK E-29
HOSES
 Hand Held Shower (Alsons) H-1, H-2
 Pre-Rinse G-48, G-86

HUNTER FILL VALVE I-6
HYCO-BARS E-23
HYDRANTS, FREEZELESS WALL.. C-1
HYDROGUARD See Powers

I-J

ICEMAKER BOX K-14
ICEMAKER KITS E-10
INDIANA BRASS
 Shower Valve A-10
INSINKERATOR
 Garbage Disposers A-15
 Water Heaters D-3
J-BENDS E-11
J-CAPS E-31
JOINT COMPOUND, PIPE K-15
JOSAM
 Wall Hydrant C-4
J.R.SMITH
 Wall Hydrant C-5

K

KNEE ACTION VALVES G-16
KOHLER
 Auto Flush Valve, Urinal J-22
 Ballcock Repair I-19, I-20
 Drinking Fountain Repair E-8, E-9
 Kitchen Faucet Repair G-63, G-64
 Lavatory Faucet Repair G-60 to G-63
 Tub/Shower Repair H-24 to H-27
 Urinal Repair J-22
 Utility Faucet Repair G-65

L

LA-CO K-15
LAN-LIN K-15
LASCO BATHWARE B-11
LAUNDRY TUBS B-12
LAVATORY
 Drain Assemblies E-10
 Faucets Section A
 Legs H-4
 Sinks B-1, B-5
LEATHER CUPS, BALLCOCK I-4
LEDGE TYPE SINK FITTINGS
 (See Complete Faucets) A-5
LEG TUB FITTINGS ... A-5, H-1, H-3, H-4

LENOX BLADES K-4
LEVELS K-7
LEVERS, TANK I-5
LIFT WIRES, TANK I-4
LIQUID DRAIN CLEANER K-14
LOCKNUTS E-30
LOGAN WIZARD SHOWER HEAD.. H-9
LUBE, VALVE STEM K-15

M

MACK GASKETS E-29
MANIFOLDS E-26
MANSFIELD
 Ballcocks I-6
 Trip Lever I-5
MAPPGAS K-5
MARCO
 Sewer Equipment K-12, K-13
METER KEYS K-2
METER NIPPLES C-1
MILWAUKIE TOOLS K-10
MIXET
 Repair Parts H-28
MOEN
 Faucets, Valves A-10, A-11
 Kitchen Repair G-70 to G-74
 Lavatory Repair G-67 to G-70
 Tub/Shower repair H-29 to H-3

MUSTEE PRODUCTS B-12

N

NAIL PLATES E-23
NIPPLE BOXES K-1
NO-CAULK FLASHINGS K-14
NUTS
 Compression E-27
 Lock E-30
 Slip Joint E-13

O

OAKUM E-31
OATEY GLUES K-14
OFFSETS E-11
OIL, CUTTING K-5
O-RING
 Assortments F-9
 Pick Order #C334 (Not Shown)

INDEX

Q-R

OUTLET

Connections E-13
Tees E-12

OVERFLOW

Tub Waste E-31, H-4
Tubes, Tank I-4

P

P-TRAPS E-13, E-14

PACKING

String F-11, K-14, K-15
Stem F-11
Swing Spout F-11

PEDAL VALVES A-4, J-1

PERSONAL SHOWERS H-1, H-2

PICK, O-RING . Order #C334 (Not Shown)

PIPE

Hangers E-22
Insulators E-23
Joint Compound K-15
Joint Tape K-5
Repair Clamps E-22

PLASTIC

Ballcocks I-6
Flush Valve I-7
Tubular E-14

PLIERS K-3, K-7, K-11

POWERS

Hydroguard Repair H-32 to H-40

PLUMBERS PUTTY K-15

PLUNGERS (Force Cups) I-7

PO PLUGS E-11

POWER TOOLS K-10

POP-UP ASSEMBLY E-10

PRE-RINSE (See Fisher, T&S, Chicago)

PRESSURE-ASSIST

FLUSHOMETERS J-18

PRESSURE REGULATORS D-4, D-5

PRICE PFISTER

Lavatory Faucet Repair G-75 to G-77

Kitchen Faucet Repair G-76 to G-79

Tub/Shower Repair G-79, H-41 to H-43

PRIMER VALVES E-25, E-26

PROPANE K-5

PUMP PARTS (Bell & Gossett) ... D-7, D-8

PUTTY, PLUMBERS K-15

PVC

Slip Couplings C-2

Traps E-14

Tubular E-14

QUATURN (See Chicago Repair) G-32, G-33

RADIATOR NIPPLE EXTRACTOR . K-2

RADIATOR VALVE HANDLE I-3

RECIPROCATING SAW BLADES.... K-4

RECTORSEAL..... K-15

REED TOOLS K-5

REGULATORS, DRINKING FOUNTAIN

American Standard E-2

Kohler E-9

RE-NU SLEEVES F-1

REPAIR KITS F-8 to F-10, F-14

REPAIR TRAPS E-11

RESEATING TOOL..... K-2

REVERSE OSMOSIS SYSTEM L-5

RHEEM WATER HEATERS D-1, D-2

RIDGID TOOLS K-6 to K-9

RINGS

Compression E-27

Friction E-19

RISERS

Basin E-19

Closet E-19

Flexible Supply E-18

ROD

Float I-4

All Theaded I-4

ROOF CEMENT K-11

ROSETTES E-29

ROTARY WASTE

(Fisher, Chicago) A-9, G-28

ROYAL FLUSH VALVE (Sloan)

Repair J-6

RUBBER WASHERS, SLIPJOINT .. E-20

S

S-TRAPS..... E-13, E-14

SANDCLOTH K-5

SADDLE TEES I-3

SAW BLADES K-4

SAWS, HACK K-4

SCREWDRIVERS & BITS K-3, K-7

SCREWS

All-Thread I-4

Assortments F-10

Bibb F-10

Closet I-4

Handle F-10

SEALANTS & LUBRICANTS K-15

SEAT

Assortments, Faucet F-14

Faucet F-12 to F-14

Toilet I-8, I-9

Wrenches K-2

SHANK WASHERS

Ballcock I-2

Flush Valve I-2

SHOE, WASTE E-12

SHOVELS..... K-11

SHOWER

Arms H-5

Heads H-1, H-5

Rods H-3

Valves See Manufacturer

Valve Socket Wrenches K-1

Converto H-3

SHOWER BASES..... B-12

SHOWER DRAINS E-31, E-32

SHOWER STALLS B-11

SINK

Gaskets E-29

Sprayers E-29

Strainers E-30

SLEEVES, COMPRESSION E-27

SLIPJOINT

Elbows E-11, E-14

Friction Rings E-19

Nuts E-13

Washers E-20

SLOAN

Flushometer Repair J-5 to J-18

Optima Faucet Repair G-80

SMITH, J.R.

Hydrant Repair C-5

SNAKES K-11, K-12, K-13

SOAP DISPENSERS G-47

SOLDER K-5

SOLDERING FLUX..... K-15

SPANNER WRENCH (Haws) E-6

SPLASH GUARDS, TUB..... H-4

SPOUTS

Chicago G-29 to G-31

Tub H-6

SPRAY HEAD FOR SINK SPRAY .. E-29

SPRAY VALVE

Fisher A-8, G-50

T&S A-14, G-86

SPUDS

Closet & Urinal I-4

Coupling Assembly (Sloan)..... J-17

Friction Rings I-4

Gaskets, Tank I-4

Wrenches K-2

STAINLESS STEEL SINKS B-6 to B-9

STEMS

Faucet F-1 to F-7

Lubricant K-15

Packing F-11

STOPCOCK KEY, FOUR WAY K-3

STOPS
 Compression C-2, C-3, E-16, E-17
 Flushometer (Sloan) J-6 to J-11, J-13
 Flushometer (Delaney) J-4
 Supply E-16, E-17

STOPPERS
 Basin E-29
 Tub E-29

STRAINERS
 Basket E-30
 Flat, Snap-in E-30, E-31
 Sink E-30
 Urinal J-21, J-22, K-15
 Wrenches K-2, K-3
 Wye D-4

SUPPLIES, FLEXIBLE E-18

SUPPLY STOPS E-16, E-17

SWING SPOUT PACKING F-11

SYMMONS
 Repair Parts G-81 to G-83, H-44 to H-47
 Scot Faucets A-12, G-81

T

T&S BRASS
 Complete Fittings A-13, A-14
 PreRinses A-14
 Repair G-84 to G-87

TAILPIECES
 ABS & PVC E-14
 Dishwasher Branch E-12, E-14
 Flanged E-12, E-14
 Flushometer J-2, J-17
 Threaded E-12

TANK
 Balls I-7
 Float I-3
 Lever Wires I-4
 Levers I-5
 Washers I-2

TAPE, DUCT K-5

TAPE, PIPEWRAP K-5

TAPE, PLUMBER'S E-23, E-24

TAPE, TEFLON K-5

TAPEMEASURES K-7

TAPS, PIPE K-3

TEE
 Compression E-27
 Outlet E-12

TEMPERA VALVE E-26

TEST PLUGS K-1

THERMOCOUPLE KITS D-10

THERMOSTATS D-10

THERMOMETERS K-1

TOILET
 Force Cups I-7
 Seat Hinge Wrench K-2
 Seats I-8, I-9
 Tank Lid I-3
 Tank Liner I-3

TOOLS K-1 to K-11

TORCHES K-5

TRAP
 Primers E-25, E-26
 Washers E-20

TRAPS
 Repair E-11
 Tubular E-11, E-13, E-14

TUB/SHOWER REPAIR Section H

TUB SPOUTS H-6

TUBING
 Benders K-3
 Cutters K-2, K-5, K-8

TUBES
 Extension E-12, E-14
 Tank Overflow I-4

TY-SEAL GASKETS E-31

U-V

UNIVERSAL-RUNDLE PARTS F-10

URINAL
 Gaskets, Felt I-2
 Gaskets, Wax I-2
 High Tank fittings J-20
 Spuds J-22, I-4
 Strainers J-21, J-22, K-15

VACUUM BREAKERS C-1, D-4

VALLEY
 Repair Parts G-88

VALVES
 Ball C-2, C-3
 Gate C-2, C-3

Shut-Off E-16, E-17

W

WALKER
 Closet Primer E-26

WALL ARMS E-11

WALL MOUNT FAUCETS
 A-2, A-4, A-6, A-7, A-9, A-10, A-13

WASHFOUNTAIN REPAIR
 Bradley G-17 to G-21

WASHERS
 Aquaseal E-20
 Assortments F-8
 Ballcock I-2
 Bibb F-8
 Bonnet F-10
 Closet Bolt I-2
 Cone E-20
 Fibre F-10
 Hose E-20
 Leather I-4
 Sink Strainer E-29
 Slip Joint E-20
 Specialty E-20
 Tank I-2
 Trap E-20
 Union E-20

WASTE

Arms E-11, E-14
 Connectors E-13
 Rotary A-9
 Shoe E-12
 Twist, Chicago G-28, G-29

WASTE & OVERFLOW

Assemblies E-31, H-4
 Gaskets H-4
 Plate H-4
 Repair Parts H-15, H-43

WATER COOLERS

..... B-10

WATER HEATERS

..... D-1, D-2, D-3

Water Heater Accessories D-9, D-10

WATTS REGULATOR

..... D-4 to D-6

WAX GASKETS

..... I-2

WIRE BRUSH

..... K-11

WIZARD SHOWER HEAD

Logan, Acorn H-9

WOODFORD

Hydrants C-5, C-6

Repair C-5 to C-8

WRENCHES

Basin K-2, K-5, K-6

Basket Strainer K-2, K-3

Socket Set, Shower K-1

Spanner K-2

Spud K-2

Toilet Seat Hinge Nut K-2

Water Heater Element D-10

X-Z

ZOELLER PUMPS K-10

ZURN

Flush Valve Repair J-19

Hydrant Repair C-9

Neo-Seal I-2

